

---

# Instruction Manual

---

## Model 81096 Web Wattchman



Serial Number \_\_\_\_\_

Port 1: Forward \_\_\_\_\_

Reflected \_\_\_\_\_

Port 2: Forward \_\_\_\_\_

Reflected \_\_\_\_\_

Date: \_\_\_\_\_

Calibrated by: \_\_\_\_\_

---



## **SAFETY**

*Personnel operating high power or high voltage systems should use standard safety precautions at all times. Do not attempt to disconnect systems or replace parts while equipment is operating. Disconnect all supply power before servicing.*

## **WARNING**

There are no user serviceable parts inside this product.  
*The possibility of accidental shock is present.*

## MODEL 81096 SPECIFICATIONS

<b>Meter Specifications</b>		2-line LCD Display $\pm 1\%$ full scale
<b>Controls</b>	<i>Front Panel</i>	Push button Alarm reset
	<i>Connections</i>	RJ-45 LAN RS-232 Serial Relay Contacts (J7) RJ-11 (Port 1) (Port 2) Ground stud Fuse holder AC power input
<b>Contact Ratings</b>		3 A at 120 VAC Resistive
<b>System Accuracy</b>		$\pm 5\%$ full scale when used with proper Coaxial Dynamics Line Sections and Detecting Elements.
<b>Power Requirements</b>		115 / 230 VAC, 50 / 60 Hz Less than 2 A

## INTRODUCTION

The Coaxial Dynamics Model 81096 Web Watchman is intended for use as a continuous performance monitor and protection device for use in RF transmission systems. It is designed to be used with 50-Ohm dual socket line sections, and will read power from two independent line sections. The operating frequency and power range is determined by the elements and line sections used. With the proper selection of elements it may also be used to monitor the combined transmitter power and power to the reject load with one display unit.

The Model 81096 can be used to measure both analog and digital signals, depending on which types of elements are used.

The forward display on the Model 81096 will indicate forward power to the load while the system is in operation. It can be set to activate the shut down circuits if forward power changes outside a preset range. The reflected display will indicate power reflected from the load, and will activate the shut down circuits if power exceeds a preset level. Each channel operates independently of each other and the alarms may be set for each system separately.

The Model 81096 is made with high quality components. Used and maintained properly, it will provide years of dependable service.



## **SECTION 1 - INSTALLATION**

### **1.1 Mounting**

The Model 81096 is designed to be mounted in a standard 19" relay rack. Control and input wire lengths are not critical so the unit can be mounted in a convenient location offering easy accessibility and viewing.

When mounting, be sure to use proper grounding techniques. Interlock wiring should be shielded and the chassis ground connection on the Watchman should be attached to a good ground, preferably to the same ground used for the transmission line.

Place the unit in the rack and secure with (4) four screws located in the slots provided. The line section may be mounted in the transmission line between the transmitter output and the antenna or between the driver and final output transmitter. The latter provides protection in the event a malfunction in the input circuits of the final transmitter.

The Model 81096 is designed to work with a series of specialized line sections from 7/8" to 6-1/8" and standard Coaxial Dynamics elements for either analog or digital applications. Elements are available from 1 W to 250 kW and from 2 MHz to 1800 MHz. A typical system normally consists of a dual socket line section with the appropriate elements for each transmission line to be monitored. Each line section comes with a 10-foot telecommunications style cable to interface with the 81096. No additional power supply or cabling is required at the line section other than an RF source and load.

### **1.2 Connections**

Connections to the Model 81096 terminal strip are as follows:

10-32 Stud	Ground Stud to Station Ground
Pin #1	Remote Reset – Momentary to Ground
Pin #2	+5 VDC @ .25 A
Pin #3	System Ground
Pin #4	Common System, Control relay – common to 5 and 6
Pin #5	Common System, Control relay – N.C.
Pin #6	Common System, Control relay – N.O.
Pin #7	System 1, Control relay – common to 8 and 9
Pin #8	System 1, Control relay – N.C.
Pin #9	System 1, Control relay – N.O.
Pin #10	System 2, Control relay – common to 11 and 12
Pin #11	System 2, Control relay – N.C.
Pin #12	System 2, Control relay – N.O.

The RJ-11 input connectors are provided for connection to the Line Sections.

AC power is applied through the fused receptacle on the rear panel. The mating power cord is supplied. Power requirements are 115/230 VAC, 50/60 Hz.

### 1.3 Setup

**Model 81096 Web Watchman**

**Setup**

DHCP Server:  Enable  Disable

Current IP Address: 192.168.3.250

Static IP Address: 192 . 168 . 3 . 250

Station ID: 0 . 1 . 0 . 1

UDP IP Address: 192 . 168 . 1 . 255

UDP MAC Address: FF . FF . FF . FF . FF . FF

UDP Port: 2552

Send To Host Data at 1 Minute Intervals (0=Off)

Email Address: \*\*\*\*\*

Coupler Range: Port #1 Forward 25000 Watts Port #1 Reflected 1000 Watts

Port #2 Forward 1000 Watts Port #2 Reflected 100 Watts

Continuous Transmit: Port #1  Enable  Disable Port #2  Enable  Disable

Coaxial Dynamics  
[www.coaxial.com](http://www.coaxial.com)

The Model 81096 needs to be setup for the proper IP address for your system as well as the proper element power ranges for your transmitter. The unit may be addressed using a ***crossover*** cable connected to the Ethernet connector on the rear panel. The initial IP address of the Model 81096 is 192.168.3.250 and the initial password is “123456”. The password may be changed by using the RS-232 connection and a terminal program. Connect at 19200,8-N-1 flow control should be set for Xon/Xoff and press enter to access the set-up menu. **To reset the unit to original factory settings, turn the unit off. Press and hold the reset switch when turning the power on.**

Both the forward and reflected power ranges must be set for each port to match the elements in use. Alarm set points are then set to match the desired trip points for high and lower power on both forward and reflected channels.

**If elements are ordered with the Model 81096, the ranges will be set at the factory on port 1 and noted on the front of this manual.**

If you are only using one port, the setting of other power ranges does not matter, but set the “continuous transmit” to disable. This will prevent the alarm from triggering at “zero” power. If AC power to the unit fails, the Model 81096 will maintain the proper settings in the nonvolatile memory.

## 1.4 Alarm Setup

Port #1		Port #2	
Alarm High	Watts Fwd	Alarm High	Watts Fwd
0.0		0	
Alarm Low	Watts Fwd	Alarm Low	Watts Fwd
0.0		0	
Alarm High	Watts Rfl	Alarm High	Watts Rfl
0		0.0	
Alarm Low	Watts Rfl	Alarm Low	Watts Rfl
0		0.0	

Audible Alarm:  Enable  Disable

Update Cancel

Coaxial Dynamics  
www.coaxial.com

Model 81096 is equipped with an audible alarm. When a fault is detected and the system is tripped, the alarm will sound. Terminals 4, 5 and 6 will switch if either system one or two faults and can be used for an external alarm. These contacts are normally open and close during a fault condition. These contacts have a rating of 2 Amps at 115 VAC. The alarms are set using an Ethernet crossover cable.

If you do not want the alarm operational for low forward or reflected power, set the low limit to zero. If you do not want the alarm to function on high forward or reflected power, set the alarm to the power rating of the element.

Set the high limit on the reflected channel to above what you expect to have reflected back from your transmitter antenna. The arrows on the elements indicate the power flow direction sensed by each element.

## 1.5 Control Contacts

Three sets of control contacts are provided. They are labeled on the rear panel. Terminals 1 and 3 provide a remote reset function, terminal 2 is a 5 V supply rated at 0.5A. Terminals 4, 5 and 6 will switch if either system faults and could be used for an external alarm. Terminals 7, 8 and 9 are for the transmitter monitored by port 1; terminals 10, 11 and 12 are for the transmitter monitored by port 2. This allows protection for combined transmitter systems or shutdown of drive and final amplifier simultaneously.



## SECTION 2 - OPERATION

### 2.1 Unit Operation


Make sure all connections; adjustments and settings are correct before operation of the unit. When RF power is present, the unit will operate as a power meter displaying both forward and reflected power for each port, if they are connected to a line section.

If you add port 2 after the initial setup, you will need to shut down the unit and enter the power and alarm settings before connecting the new line section cable to the Model 81096. (See section 1.3 Setup)

When the reflected power rises above the preset level (or when forward power drops below the preset level) the Model 81096 will sound the alarm. If the systems are connected to an interlock circuit the protected unit will be shutdown and the display will hold the fault condition until the unit is reset. To reset the unit, press the reset button until the display indicates "Sending E-Mail". **Note: this resets only the Model 81096. The fault needs to be corrected before restarting the transmitter.**

### 2.2 Load Adjustments


If adjustment at the load is required without interruption by the Model 81096, set the alarm points outside the range expected to be measured.

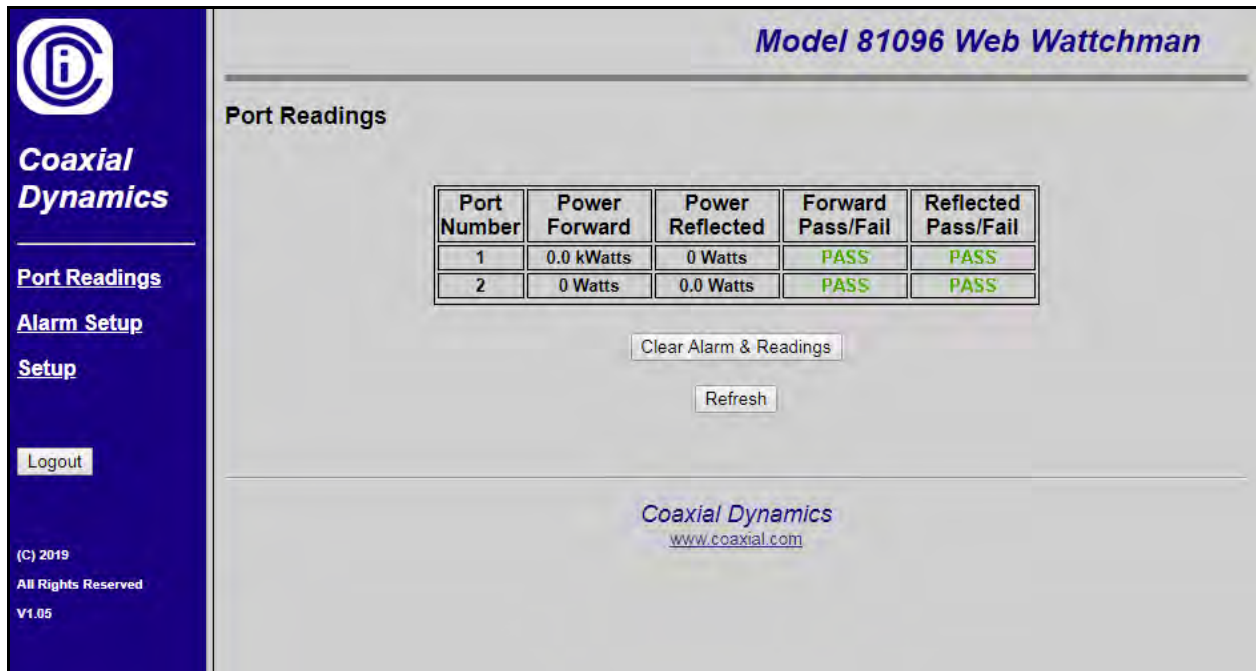

The screenshot displays the 'Model 81096 Web Watchman' interface. On the left is a dark blue sidebar with the Coaxial Dynamics logo and navigation links: 'Port Readings' (highlighted), 'Alarm Setup', 'Setup', and 'Logout'. The main content area shows 'Port Readings' with a table of data for two ports. Below the table are 'Clear Alarm & Readings' and 'Refresh' buttons. The footer includes the Coaxial Dynamics logo, website URL, and copyright information.

Port Number	Power Forward	Power Reflected	Forward Pass/Fail	Reflected Pass/Fail
1	0.0 kWatts	0 Watts	PASS	PASS
2	0 Watts	0.0 Watts	PASS	PASS

# VSWR Nomograph

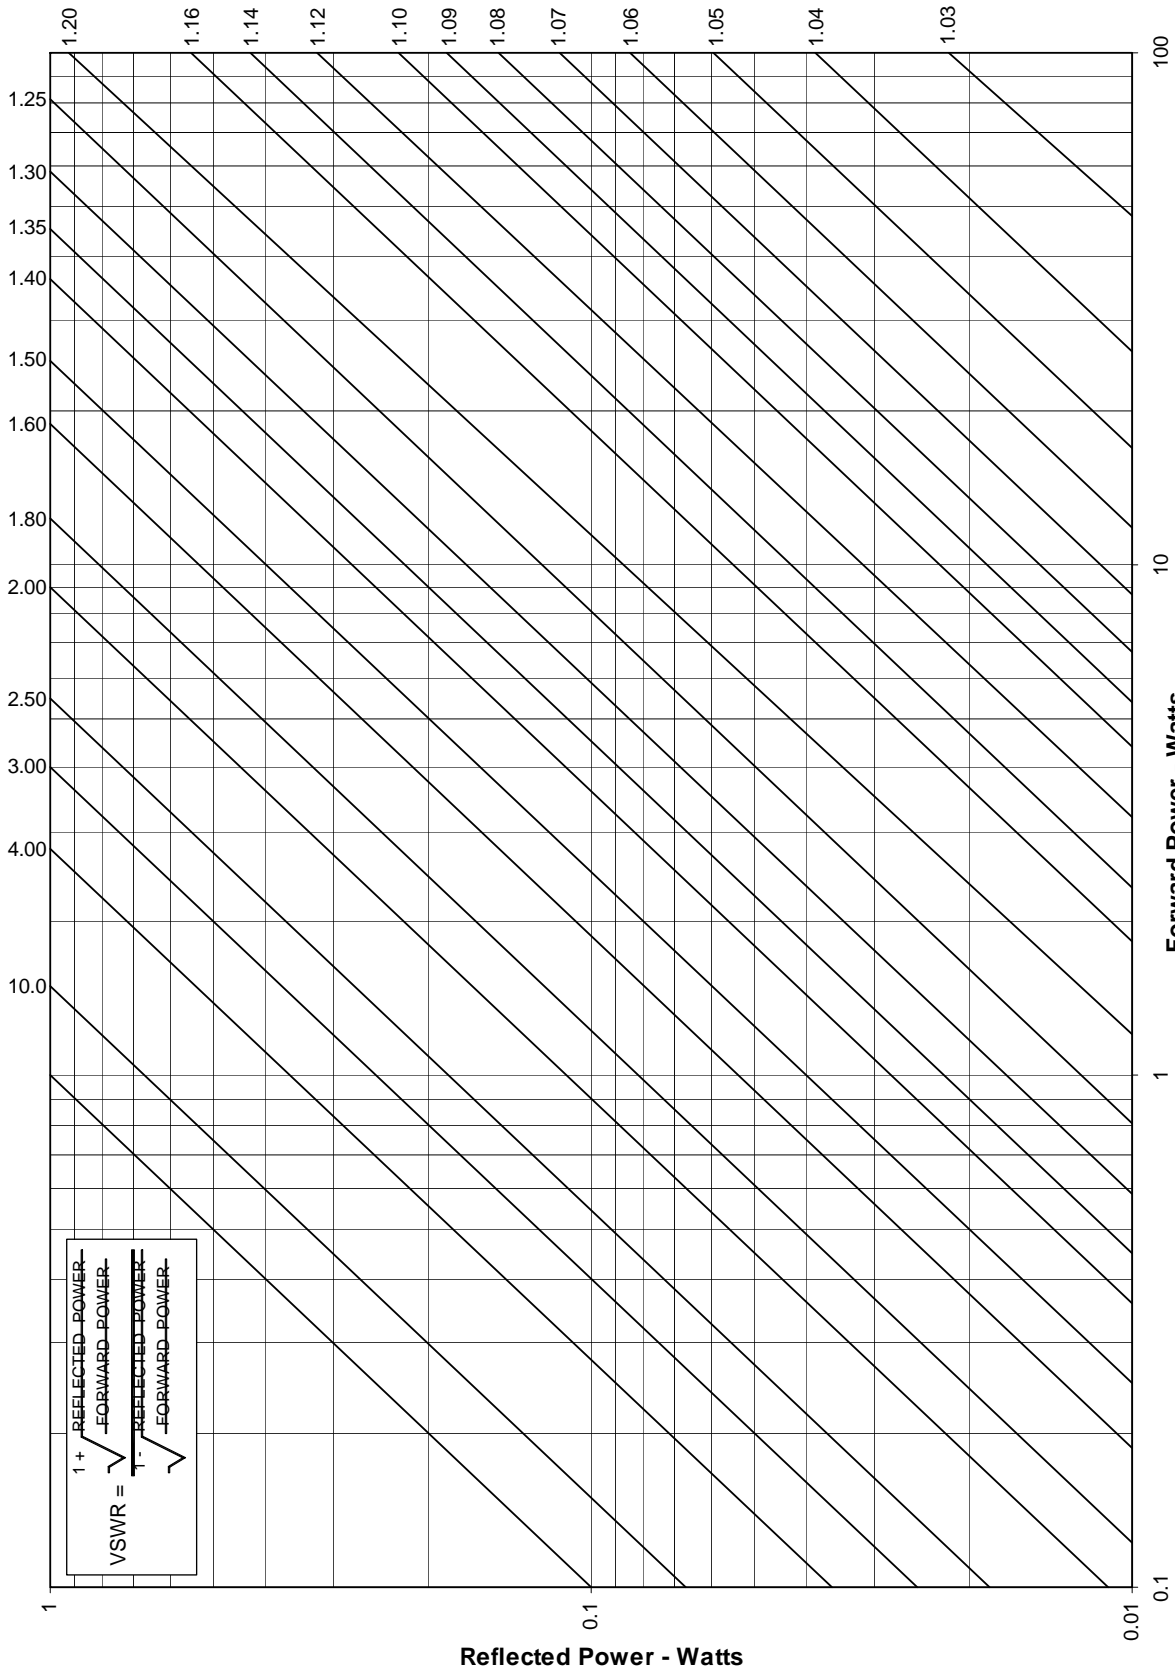

For higher power values multiply both scales by the same decimal figure

